




**01**  
Posizionare le forche nelle apposite scatole di inforcazione mantenendo i montanti di sollevamento del carrello in posizione verticale.  
Se necessario agire sul traslatore per centrare i punti di inserimento delle forche.

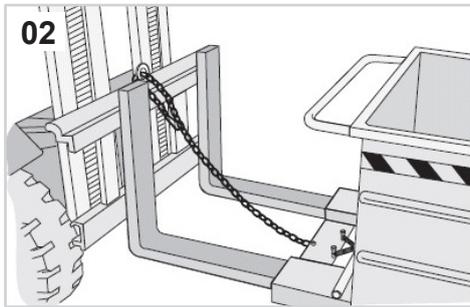


**02**  
Agganciare la catena di sicurezza del contenitore alla traversa orizzontale del gruppo di sollevamento.

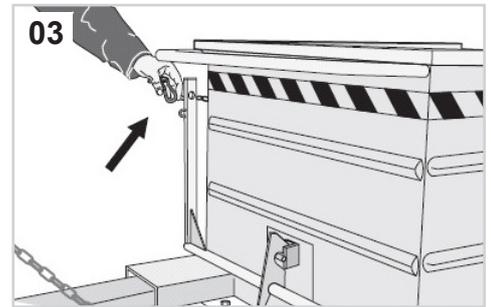


**03**  
Togliere il moschettone di sicurezza dalla leva di sgancio cassone.

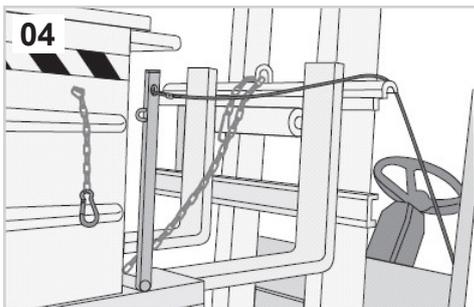


**04**  
Posizionare il cordino della leva sgancio al posto di guida del carrello.

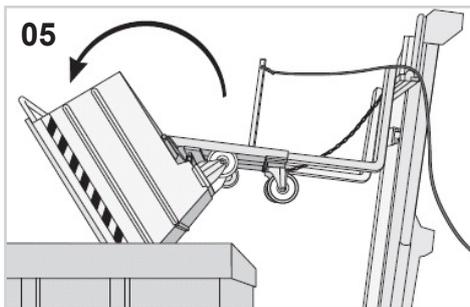


**05**  
Sollevare di circa 10 cm il contenitore. Portarsi presso la zona di scarico. Sollevare il contenitore ad una altezza appena superiore a quella del cassone di scarico. Avanzare fino a sovrapporre il contenitore al cassone di scarico. Tirare il cordino in modo da sganciare la leva di blocco; a questo punto il contenitore si ribalta e scarica il suo contenuto nel cassone sottostante.

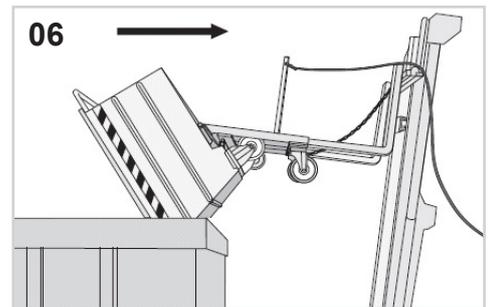


**06**  
Arretrare fino a sovrapporre il contenitore al bordo del cassone.

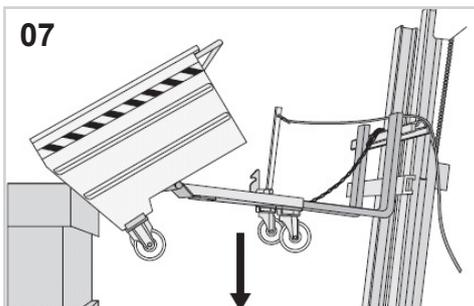


**07**  
Abbassare lentamente le forche in modo da fare ruotare il contenitore.

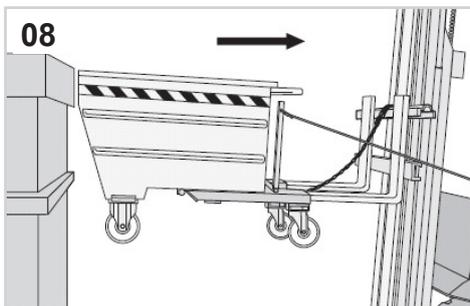


**08**  
Il contenitore automaticamente si posiziona orizzontalmente e si riaggancia al fermo meccanico. Rimettere l'anello di sicurezza alla leva di sgancio cassone. Riportare il contenitore al proprio posto di raccolta.

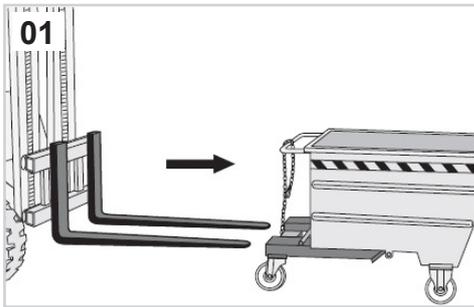


01 Place the forks into the appropriate fork jackets positioned on the bottom of the skip tilting container

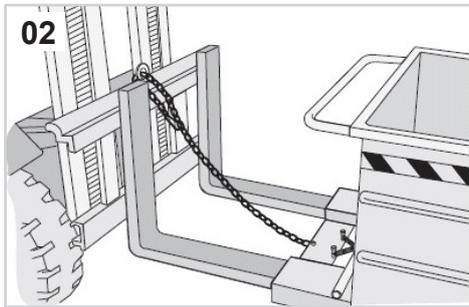


02 Connect the safety chain of the skip tilting container to the front crossbar of the fork carrier

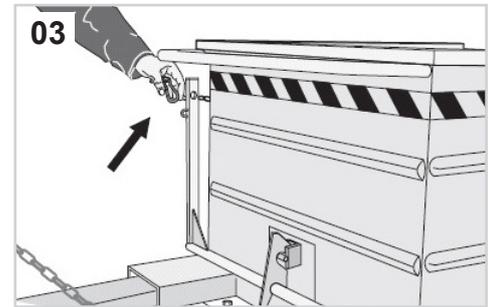


03 Remove the safety carabiner from the release lever of the container

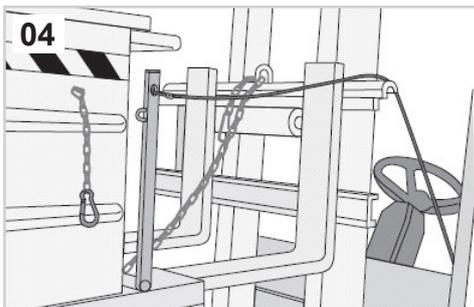


04 Place the release lever rope near the driver's seat

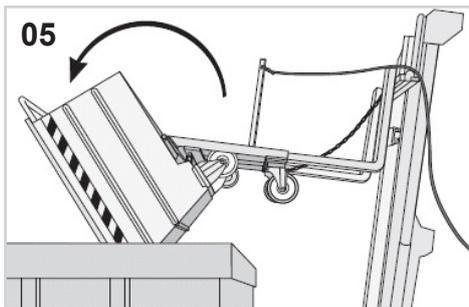


05 To unload the container: lift the skip tilting container just over the scraps collection container. Move forward with the fork lift truck until the skip tilting container is overlayed to the collection container. To unload the scraps pull the rope in order to operate the release lever of the container

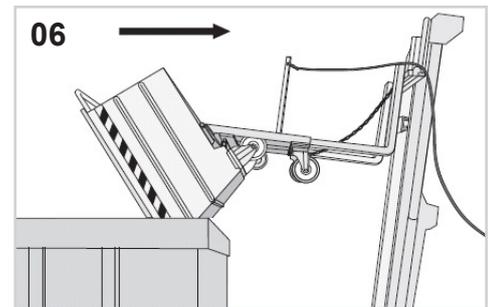

06 Move back in order to overlay the skip tilting container to the edge of the container

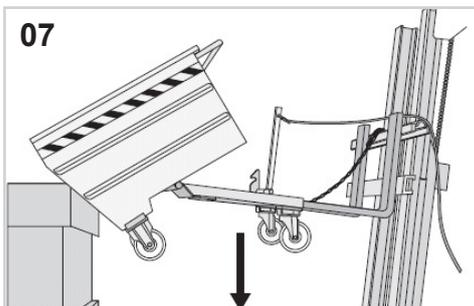

07 Slowly lower the forks to rotate the container

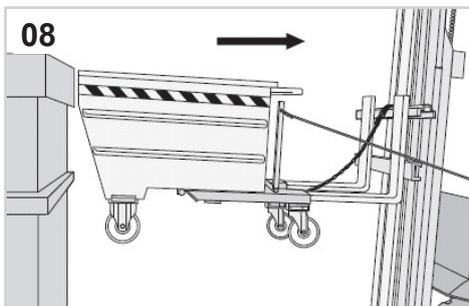

08 The container automatically returns to an horizontal position hooking up again the mechanical stop. Reposition the safety carabiner to the release lever.